

EBG SIEMERT

Driver Installation

SI – TL1

Quick Guide

For Windows 7

Step 1: Connecting with the Computer

Connect the USB-Interface with the PC by plugging it into a free USB port. It may occur a pop-up message from Windows, that the driver-software can't be found. If so, skip the pop-up message.



Step 2: Downloading the driver-software

For downloading the driver-software, please visit:

<https://www.silabs.com/products/development-tools/software/usb-to-uart-bridge-vcp-drivers>


To start the download click on **Download VCP (5.3 MB) (Default)**.

Download for Windows 7/8/8.1/10 (v6.7.4)

| Platform | Software | Release Notes |
|--|---|---|
|  Windows 7/8/8.1/10 | Download VCP (5.3 MB) (Default) | Download VCP Revision History |
|  Windows 7/8/8.1/10 | Download VCP with Serial Enumeration (5.3 MB) Learn More » | Download VCP Revision History |


Step 3: Installing the driver for the SI-TL1

Extract the downloaded ZIP file. If you have a 32-Bit version of Windows 7 double-click on **CP210xVCPInstaller_x86**. If you have a 64-Bit version of Windows 7 double-click on **CP210xVCPInstaller_x64**.

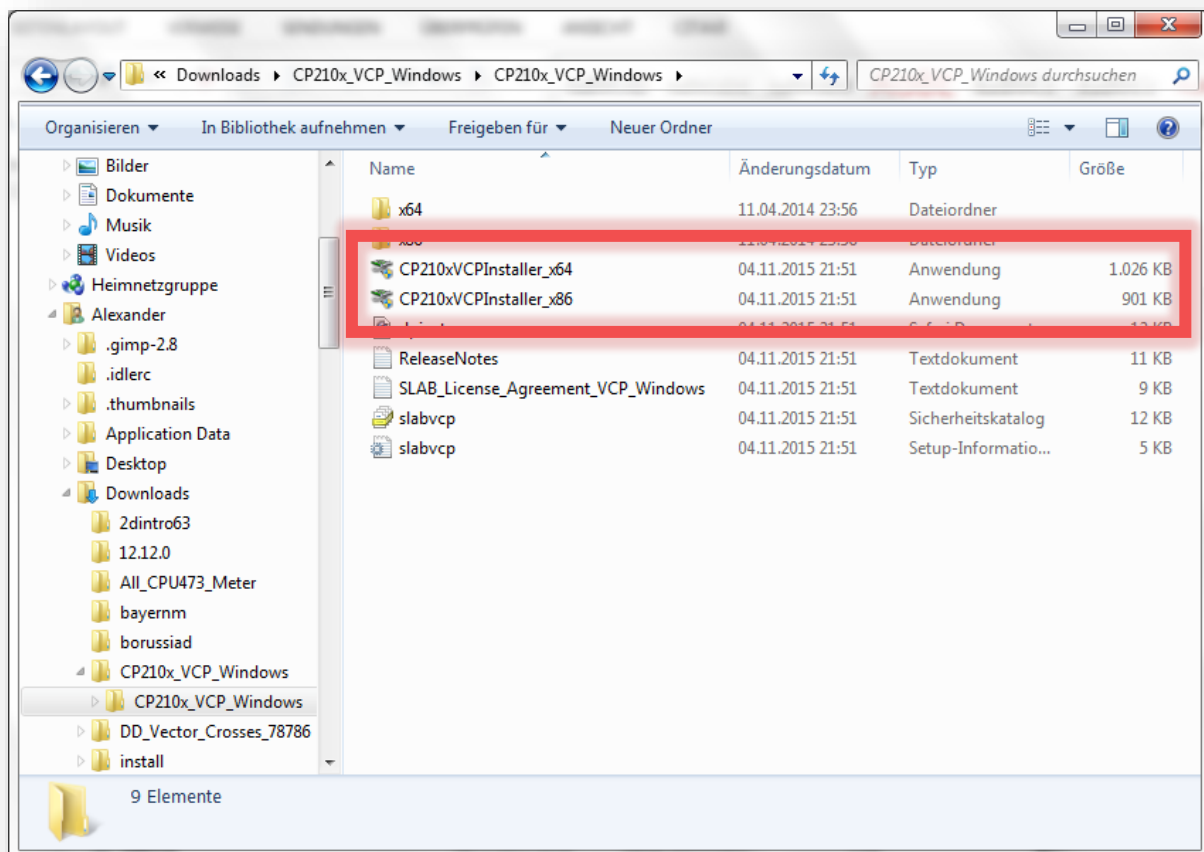


Now the driver installer opens and will guide you through the installation process.


Click on **Next**.

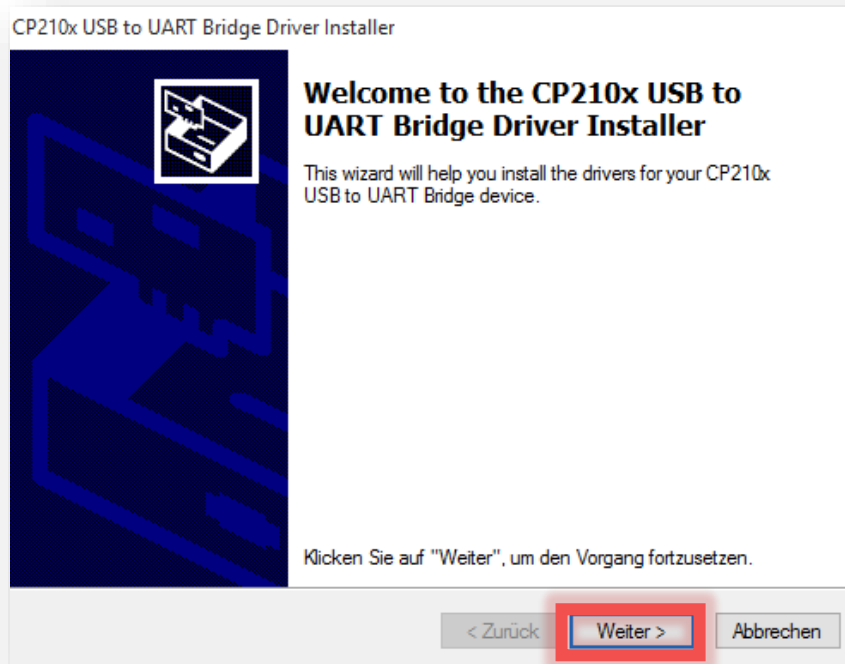

Accept the Terms and Conditions and click on **Next**.

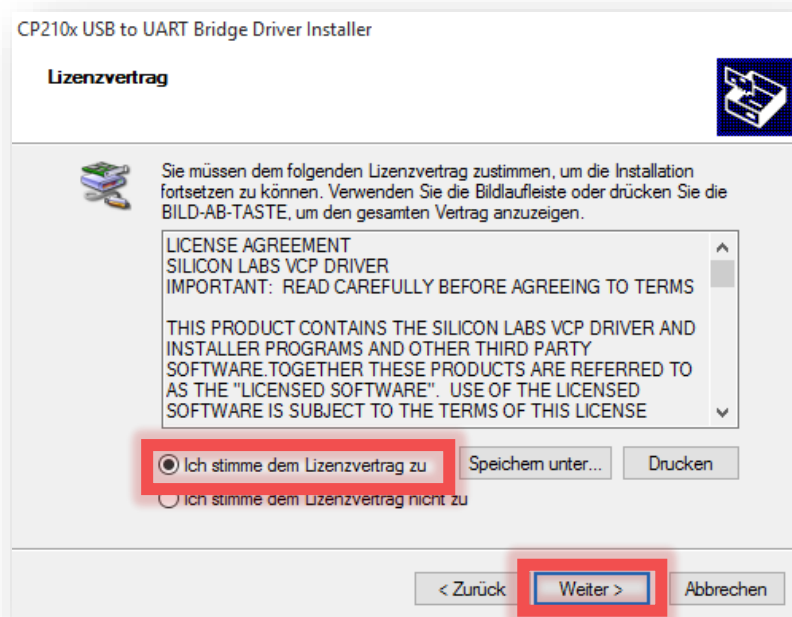

Now the driver will be installed.

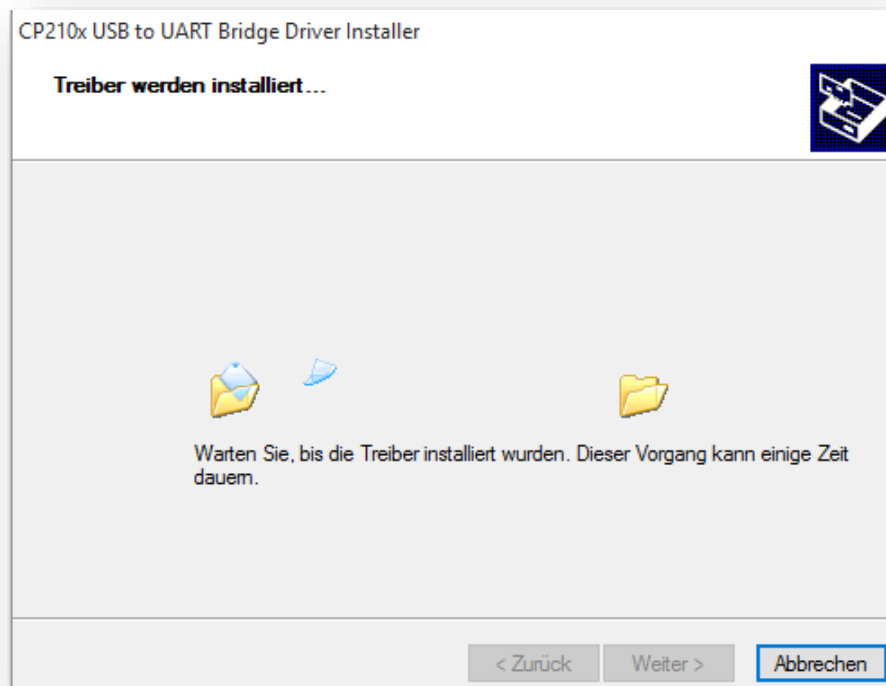

Now the driver is successfully installed. Click on **Done** to complete the installation process.

